


BFN50F(F16/50AC), BGN50C(F18/50AC)

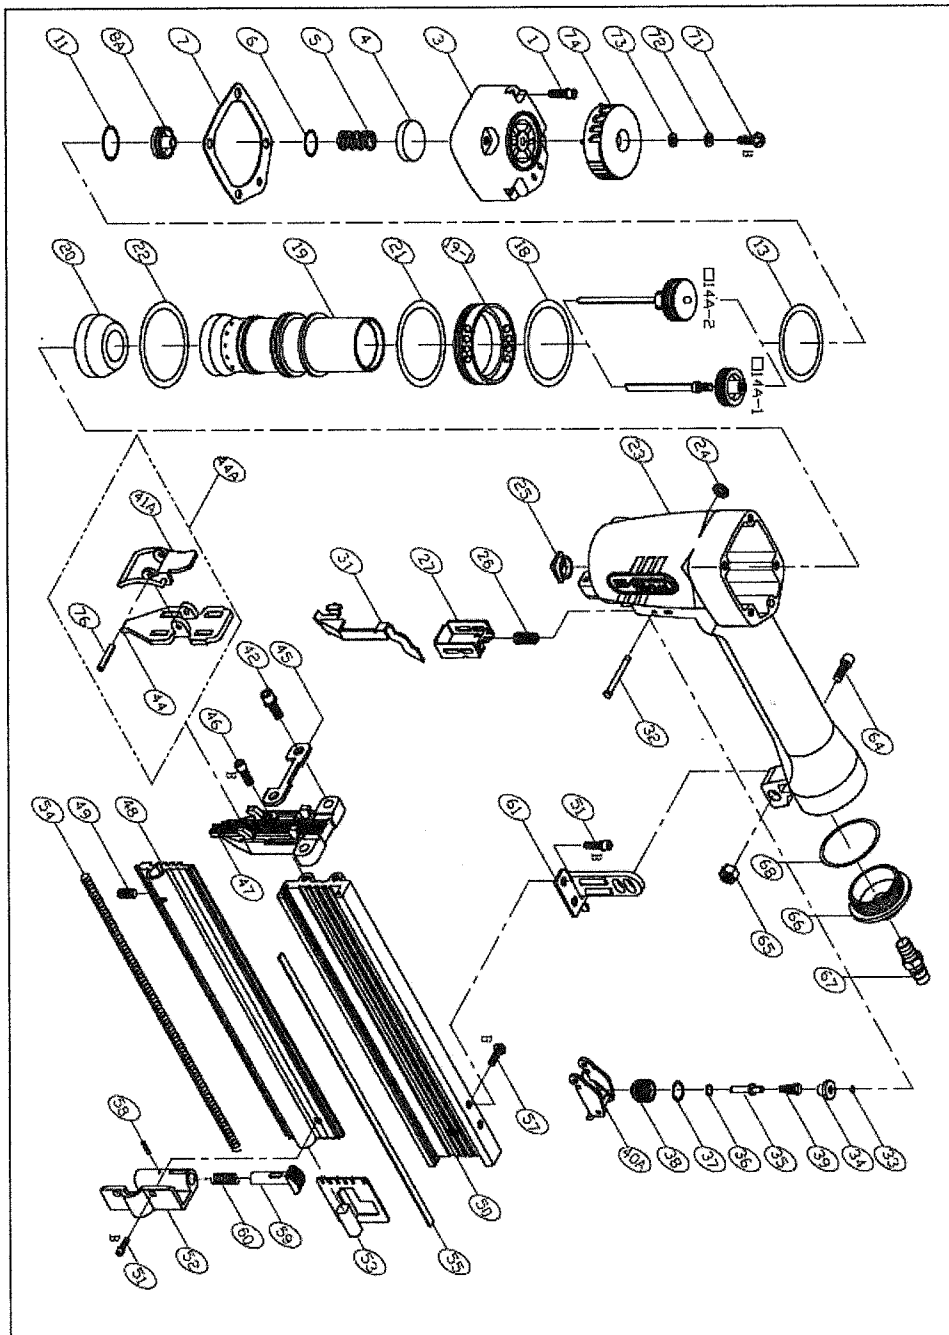

TEILELISTE DES MODELLS BFN50F(F16/50AC) & BGN50C(F18/50AC)

REF. NO.	PART NO.	DESCRIPTION
1	F50C01N	BOLZEN + SCHEIBE
3	F50C03	KAPPE
4	F4004	DICHTUNG
5	F4005	ROLLFEDER
6	F4006	O-RING
7	F50C07	KAPPENDICHTUNG
8A	F50C08A	KOLBENDECKELVENTIL
11	F50C11	O-RING
13	F50C13	O-RING
14A-1	F50C14A1 T50C14A1	KOLBEN-TREIBER-EINHEIT (1-PC) (FOR BGN50C) (FOR BFN50F)
14A-2	F50C14A T50C14A	KOLBEN-TREIBER-EINHEIT (2-PC) (FOR BGN50C) (FOR BFN50F)
18	F50C18	O-RING
19	F50C19	ZYLINDER
19-1	F50C19A	STELLRING
20	F50C20	PUFFER
21	F50C21	O-RING
22	COM022	O-RING
23	F50C23	GEHÄUSE
24	F5024N	O-RING
25	F4025N T50C25	DÜSE (FOR BGN50C) (FOR BFN50F)
26	F50C26	FEDERFÜHRUNG
27	F50C27	SICHERUNGSFÜHRUNG
31	F50C31	SICHERUNG
32	B64C28N	STÜTZBOLZEN
33	F50C33	O-RING
34	F50C34	AUSLÖSERVENTILKOPF
35	F50C35 T50C35	AUSLÖSERVENTIL-WELLE (FOR BGN50C) (FOR BFN50F)
36	F50C36	O-RING
37	F50C37	O-RING
38	F50C38	TRIGGERVENTILANLEITUNG
39	F50C39	ROLLFEDER

REF. NO.	PART NO.	DESCRIPTION
40A	F50C40N F50C40	LOSEN SIE VERSAMMLUNG AUS (BFN50F) LOSEN SIE VERSAMMLUNG AUS (BGN50C)
41A	F5041A	SCHIEBER
42	F50C42N	BOLZEN + SCHEIBE
44	F5044	VORDERE PLATTE
44A	F50C44A	VORDERE PLATTE EINGESTELLT
45	F5045	OBERE PLATTE
46	F4046	BOLZEN
47	F5047 T50C47	TREIBERCANLEITUNG (FOR BGN50C) (FOR BFN50F)
48	F50C48 T50C48	OBERES MAGAZIN (FOR BGN50C) (FOR BFN50F)
49	F50C49	BOLZEN
50	F50C50 T50C50	UNTERES MAGAZIN (FOR BGN50C) (FOR BFN50F)
51	F4051N	BOLZEN + SCHEIBE
52	F50C52	ENDE STOPPER
53	F5053N F5053	NAGELSCHIEBER (BFN50F) NAGELSCHIEBER (BGN50C)
54	F5054	ROLLFEDER
55	F4055	NAGELANLEITUNGSZWISCHENLAGE
57	F32C41N	BOLZEN (FOR BFN50F)
58	F50C58	SPLINT
59	F50C59	ANSCHLAG
60	F50C60	ROLLFEDER
61	F50C61	SUPPORT
64	F50C64	BOLZEN
65	F50C65	KNOTERMUTTER
66	F50C66	ENDSTOPSEL
67	F5064	LUFTEN SIE STOPSEL
68	F50C68	O-RING
71	F50C71	DRÜCKRING
72	F50C72	SCHIEIBE
73	F50C73	DICHTUNG
74	F50C74	AUSLASKAPPE
76	B64C47N	SPLINT

LISTE DES PIÈCES DU MODÈLE BFN50F(F16/50AC) & BGN50C(F18/50AC)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F50C01N	BOULON + RONDELLE	40A	F50C40N	DECLENCHER LASSEMBLEE (BFN50F)
3	F50C03	CAPSULE		F50C40	DECLENCHER LASSEMBLEE (BGN50C)
4	F4004	JOINT	41A	F5041A	VERROU
5	F4005	RESSORT	42	F50C42N	BOULON + RONDELLE
6	F4006	BOUCLE-O	44	F5044	AVANT PLAT
7	F50C07	JOINT DE CHAPEAU	44A	F50C44A	LE PLAT AVANT PLACE
8A	F50C08A	VALVE DE TETE DE PISTON	45	F5045	PLAQUE SUPÉRIEURE
11	F50C11	BOUCLE-O	46	F4046	BOULON
13	F50C13	BOUCLE-O	47	F5047 T50C47	GUIDE DE GESTIONNAIRE (FOR BGN50C)
14A-1	F50C14A1	UNITE DE PISTON (1-PC) (FOR BGN50C)			(FOR BFN50F)
	T50C14A1	(FOR BFN50F)			
14A-2	F50C14A	UNITE DE PISTON (2-PC) (FOR BGN50C)	48	F50C48 T50C48	MAGASIN SUPÉRIEURE (FOR BGN50C)
	T50C14A	(FOR BFN50F)			(FOR BFN50F)
18	F50C18	BOUCLE-O	49	F50C49	GOUPILLE
19	F50C19	CYLINDRE	50	F50C50 T50C50	MAGASIN (FOR BGN50C)
19-1	F50C19A	COLLIER			(FOR BFN50F)
20	F50C20	AMORTISSEUR	51	F4051N	BOULON + RONDELLE
21	F50C21	BOUCLE-O	52	F50C52	TAQUET D'EXTREMITÉ
22	COM022	BOUCLE-O	53	F5053N	POUSSOIR (FOR BFN50F)
23	F50C23	CARTER		F5053	POUSSOIR (FOR BGN50C)
24	F5024N	BOUCLE-O	54	F5054	RESSORT
25	F4025N	BUSE (FOR BGN50C)	55	F4055	RECOUVREMENT DE GUIDE DONGLE
	T50C25	(FOR BFN50F)	57	F32C41N	BOULON (BFN50F)
26	F50C26	RESSORT	58	F50C58	COUPILLE
27	F50C27	GUIDE DE SÉCURITE	59	F50C59	TAQUET
31	F50C31	SECURITÉ	60	F50C60	RESSORT
32	B64C28N	COUPILLE	61	F50C61	SUPPORT
33	F50C33	BOUCLE-O	64	F50C64	BOULON
34	F50C34	TÊTE DE LA VALVE DE DÉTENTE	65	F50C65	CONTRE-ECROU
35	F50C35	ARBRE DE LA VALVE DÉTENTE (FOR BGN50C)	66	F50C66	MONTURE D'EMBOUT
	T50C35	(FOR BFN50F)	67	F5064	AERER LE BOUCHON
36	F50C36	BOUCLE-O	68	F50C68	BOUCLE-O
37	F50C37	BOUCLE-O	71	F50C71	BOULON
38	F50C38	GUIDE DE LA VALVE DE DÉTENTE	72	F50C72	RONDELLE
39	F50C39	RESSORT	73	F50C73	JOINT
			74	F50C74	COUVERCLE D'ÉCHAPPEMENT
			76	B64C47N	COUPILLE

DESPIECE GRAPADORA BFN50F(F16/50AC) & BGN50C(F18/50AC)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F50C01N	PERNO + ARANDELA	40A	F50C40N	PROVOQUE LA ASAMBLEA (BFN50F)
3	F50C03	TAPA		F50C40	PROVOQUE LA ASAMBLEA (BGN50C)
4	F4004	SELLO	41A	F5041A	CIERRE
5	F4005	MULELLE	42	F50C42N	PERNO + ARANDELA
6	F4006	ANILLO-O	44	F5044	DELANTERA PLACA
7	F50C07	SELLO DEL CSQUILLO	44A	F50C44A	LA PLACA DELANTERA FIJA
8A	F50C08A	VALVULA PRINCIPAL DE PISTON	45	F5045	PALATO SUPERIOR
11	F50C11	ANILLO-O	46	F4046	PERNO
13	F50C13	ANILLO-O	47	F5047 T50C47	GUIA DEL PROGRAMA PILOTO (FOR BGN50C)
14A-1	F50C14A1	UNIDAD DEL PISTON (1-PC) (FOR BGN50C)			T50C47
	T50C14A1	(FOR BFN50F)	48	F50C48 T50C48	CARRO B (FOR BGN50C)
14A-2	F50C14A	UNIDAD DEL PISTON (2-PC) (FOR BGN50C)			T50C48
	T50C14A	(FOR BFN50F)	49	F50C49	PERNO
18	F50C18	ANILLO-O	50	F50C50 T50C50	CARRO A (FOR BGN50C)
19	F50C19	CILINDRO			T50C50
19-1	F50C19A	COLLAR	51	F4051N	PERNO + ARANDELA
20	F50C20	TOPE	52	F50C52	TAPON DEL EXTREMO
21	F50C21	ANILLO-O	53	F5053N	EMPUJADOR (FOR BFN50F)
22	COM022	ANILLO-O		F5053	EMPUJADOR (FOR BGN50C)
23	F50C23	CUERPO	54	F5054	MUELLE
24	F5024N	ANILLO-O	55	F4055	TRAZADOR DE LINEAS DE LA GUIA DEL CLAVO
25	F4025N	LANZADERA (FOR BGN50C)	57	F32C41N	PERNO (FOR BFN50F)
	T50C25	(FOR BFN50F)	58	F50C58	SPLINT
26	F50C26	MUELLE	59	F50C59	TAPON
27	F50C27	GUIA	60	F50C60	MUELLE
31	F50C31	SEGURO	61	F50C61	AYUDA
32	B64C28N	PASADOR	64	F50C64	PERNO
33	F50C33	JUNTA	65	F50C65	TUERCA DE FIJACION
34	F50C34	DISPASADOR	66	F50C66	CASQUILLO DE EXTREMO
35	F50C35	VASTAGO (FOR BGN50C)	67	F5064	TAPON AEREO
	T50C35	(FOR BFN50F)	68	F50C68	ANILLO-O
36	F50C36	ANILLO-O	71	F50C71	PERNO
37	F50C37	ANILLO-O	72	F50C72	ARANDELA
38	F50C38	GUIA DE LA VALVULA DEL DISPARADOR	73	F50C73	SELLO
39	F50C39	MUELLE	74	F50C74	TAPA
			76	B64C47N	SPLINT

MODEL BFN50F(F16/50AC) & BGN50C(F18/50AC) PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
1	F50C01N	BOLT + WASHER
3	F50C03	CAP
4	F4004	SEAL
5	F4005	SPRING
6	F4006	O-RING
7	F50C07	CAP SEAL
8A	F50C08A	PISTON HEAD VALVE ASM
11	F50C11	O-RING
13	F50C13	O-RING
14A-1	F50C14A1	PISTON UNIT (1-PC) (FOR BGN50C)
	T50C14A1	(FOR BFN50F)
14A-2	F50C14A	PISTON UNIT (2-PC) (FOR BGN50C)
	T50C14A	(FOR BFN50F)
18	F50C18	O-RING
19	F50C19	CYLINDER
19-1	F50C19A	COLLAR
20	F50C20	BUMPER
21	F50C21	O-RING
22	COM022	O-RING
23	F50C23	BODY
24	F5024N	O-RING
25	F4025N	NOZZLE (FOR BGN50C)
	T50C25	(FOR BFN50F)
26	F50C26	SPRING
27	F50C27	SAFETY GUIDE
31	F50C31	SAFETY
32	B64C28N	STEPPED PIN
33	F50C33	O-RING
34	F50C34	TRIGGER VALVE HEAD
35	F50C35	TRIGGER VALVE STEM (FOR BGN50C)
	T50C35	(FOR BFN50F)
36	F50C36	O-RING
37	F50C37	O-RING
38	F50C38	TRIGGER VALVE GUIDE
39	F50C39	SPRING

REF. NO.	PART NO.	DESCRIPTION
40A	F50C40N	TRIGGER ASSEMBLY (FOR BFN50F)
	F50C40	TRIGGER ASSEMBLY (FOR BGN50C)
41A	F5041A	LATCH
42	F50C42N	BOLT + WASHER
44	F5044	FRONT PLATE
44A	F50C44A	FRONT PLATE SET
45	F5045	UPPER PLATE
46	F4046	BOLT
47	F5047	DRIVER GUIDE (FOR BGN50C)
	T50C47	(FOR BFN50F)
48	F50C48	UPPER MAGAZINE (FOR BGN50C)
	T50C48	(FOR BFN50F)
49	F50C49	SET SCREW
50	F50C50	MAGAZINE (FOR BGN50C)
	T50C50	(FOR BFN50F)
51	F4051N	BOLT + WASHER
52	F50C52	END STOPPER
53	F5053N	PUSHER (FOR BFN50F)
	F5053	PUSHER (FOR BGN50C)
54	F5054	SPRING
55	F4055	NAIL GUIDE LINER
57	F32C41N	BOLT (FOR BFN50F)
58	F50C58	ROLLED PIN
59	F50C59	STOPPER
60	F50C60	LATCH SPRING
61	F50C61	SUPPORT
64	F50C64	BOLT + SW
65	F50C65	LOCK NUT
66	F50C66	END CAP
67	F5064	AIR PLUG
68	F50C68	O-RING
71	F50C71	BOLT
72	F50C72	WASHER
73	F50C73	SEAL
74	F50C74	EXHAUST COVER
76	B64C47N	ROLLED PIN