




**WIRING DIAGRAM
509X**

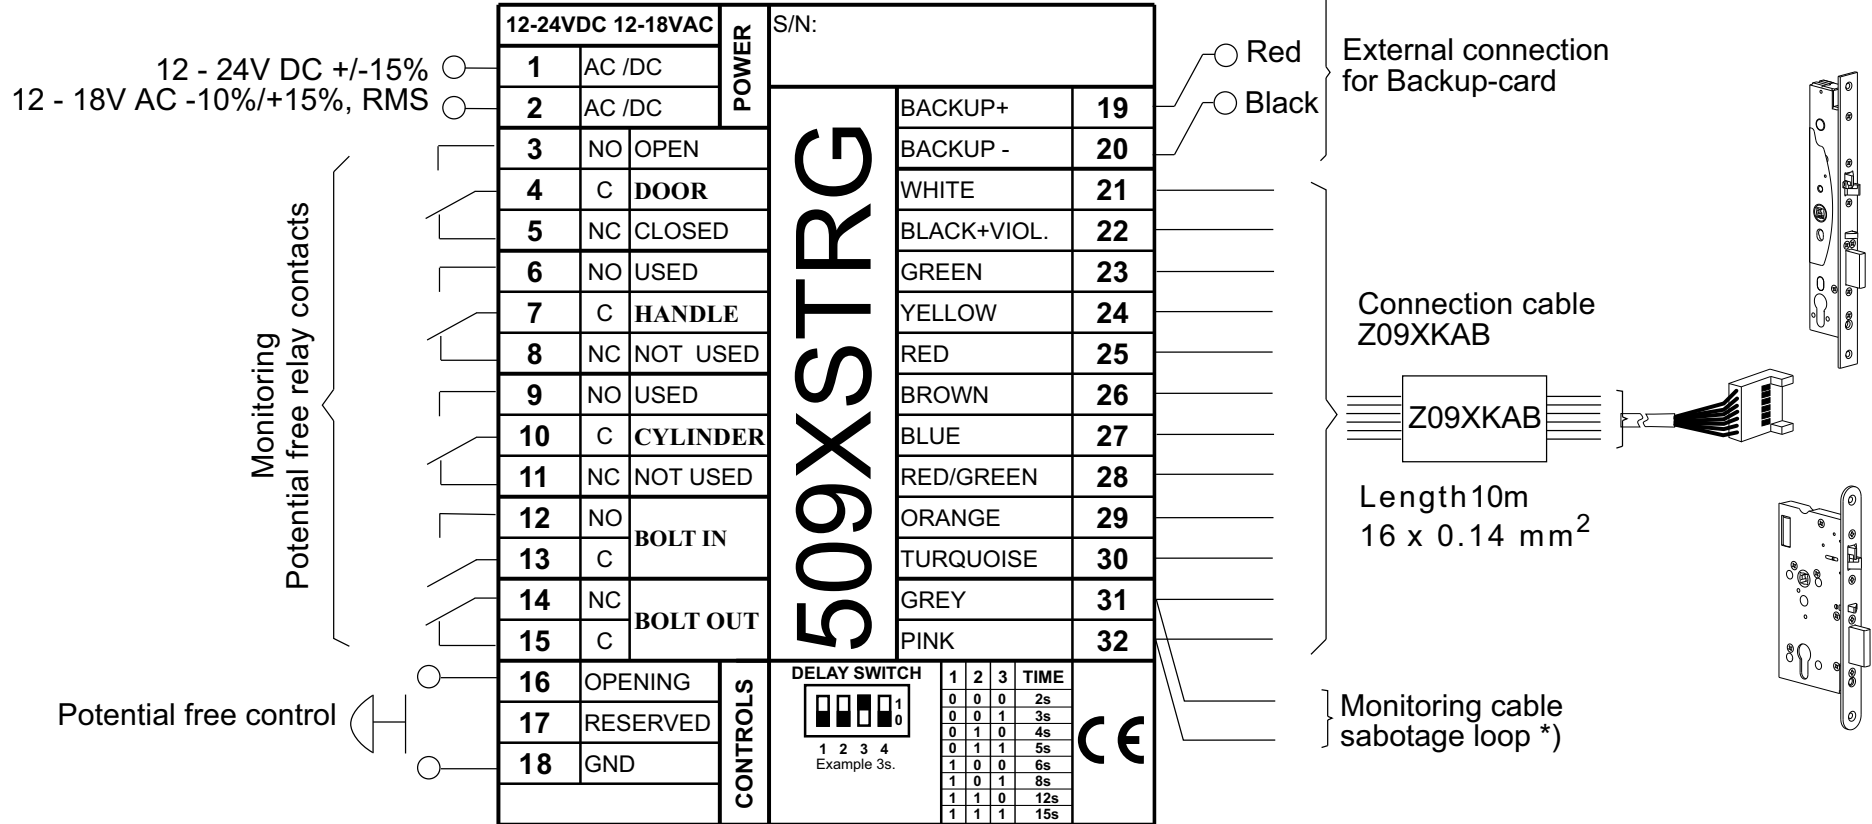

Relays of control unit when:

- Door closed
- Handle not used
- Key cylinder not used
- Bolt not in
- Bolt out

*) Potential free loop is closed when connection cable is connected to lockcase.

