
EN DE

Cable Tray SWING (1200 mm)

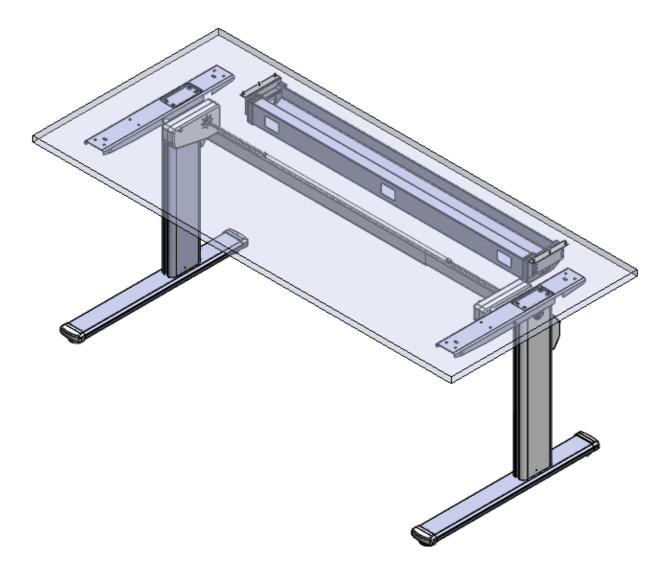



Assembly Manual

Read this manual thoroughly and store in a safe place!

Content box


#	Part name	Qty
01	Pre Assembly Cable Tray 1200mm	1
02	Tray Guide Cap - Right	1
03	Tray Guide Cap - Left	1
04	Screw PH Chipboard 4.5 x 16mm	6

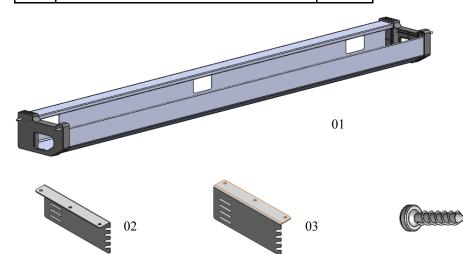

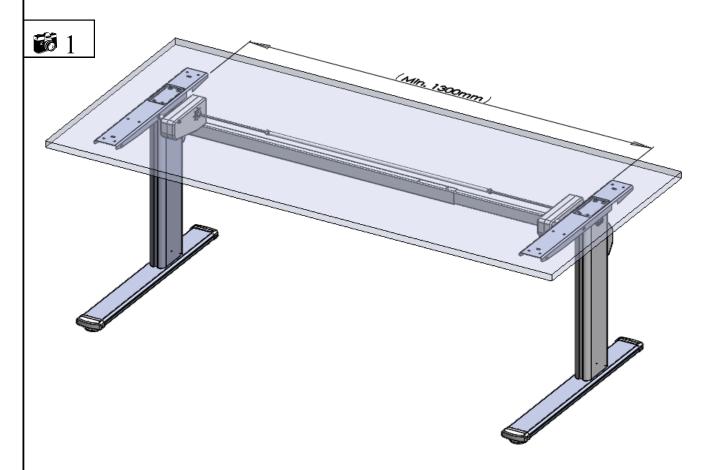


Adjusting the frame wide

• Pull the frame outward to the minimum 1300mm wide.

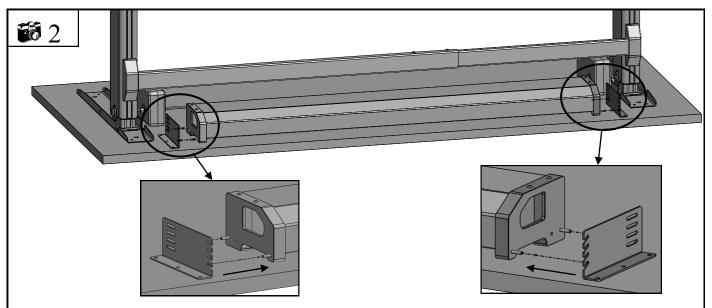


- Put the pre-assembly cable tray 1200mm at the centre of the table top. Slot the tray guide cap right and tray guide cap left into the spring pin.




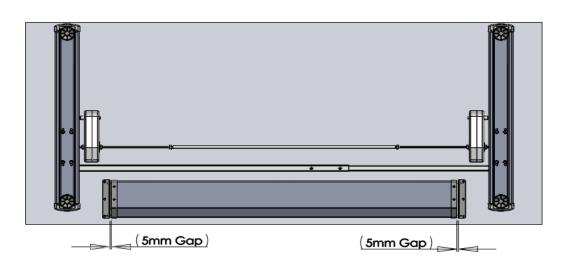

Leave 5mm gap between the pre-assembly cable tray and the tray guide cap right and left.



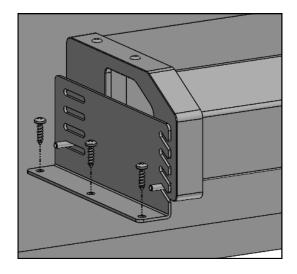

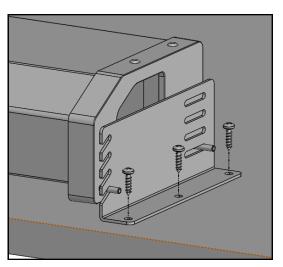

Tighten the 6x chipboard screw with screw driver.

Mounting Direction Option 1 Option 2 Q M M